



To perform the update the touchpad has to remain powered up, connect the touchpad to a laptop using the usb cable provided.

Extract the TFT.BIN file from the download zip file.

Copy & Paste the tft.bin file onto the touchpad drive on the PC.

Then perform the following steps on the Touchpad;

- 1.Select the Options tab on the left
- 2.Press Setting
- 3.Select System
- 4.Select Firmware Update
- 5.Press Done

The TFT will now update and the display will reset. To confirm the update was successful, check the version number in the System Info Tab