

kanmor® - Data Brochure

Mixing Control 360e


D 360e

06/03

The Mixing Control 360e is designed to control the supply water temperature to a hydronic system in order to provide outdoor reset or setpoint operation. The control uses a floating action mixing valve to regulate the supply water temperature, while protecting the boiler against flue gas condensation. The control has a Liquid Crystal Display (LCD) to view system status and operating information.

Additional Functions Include:

- Quick Setup for easy installation and programming of control
- User comfort adjustment to increase or decrease building space temperature
- Advanced settings to fine-tune building requirements
- Boiler Control for improved energy savings
- Powered mixing system pump output
- Optional indoor sensor for room air temperature control
- Test sequence to ensure proper component operation
- Setback input for energy savings
- 230 V (ac) power supply
- CE Approved

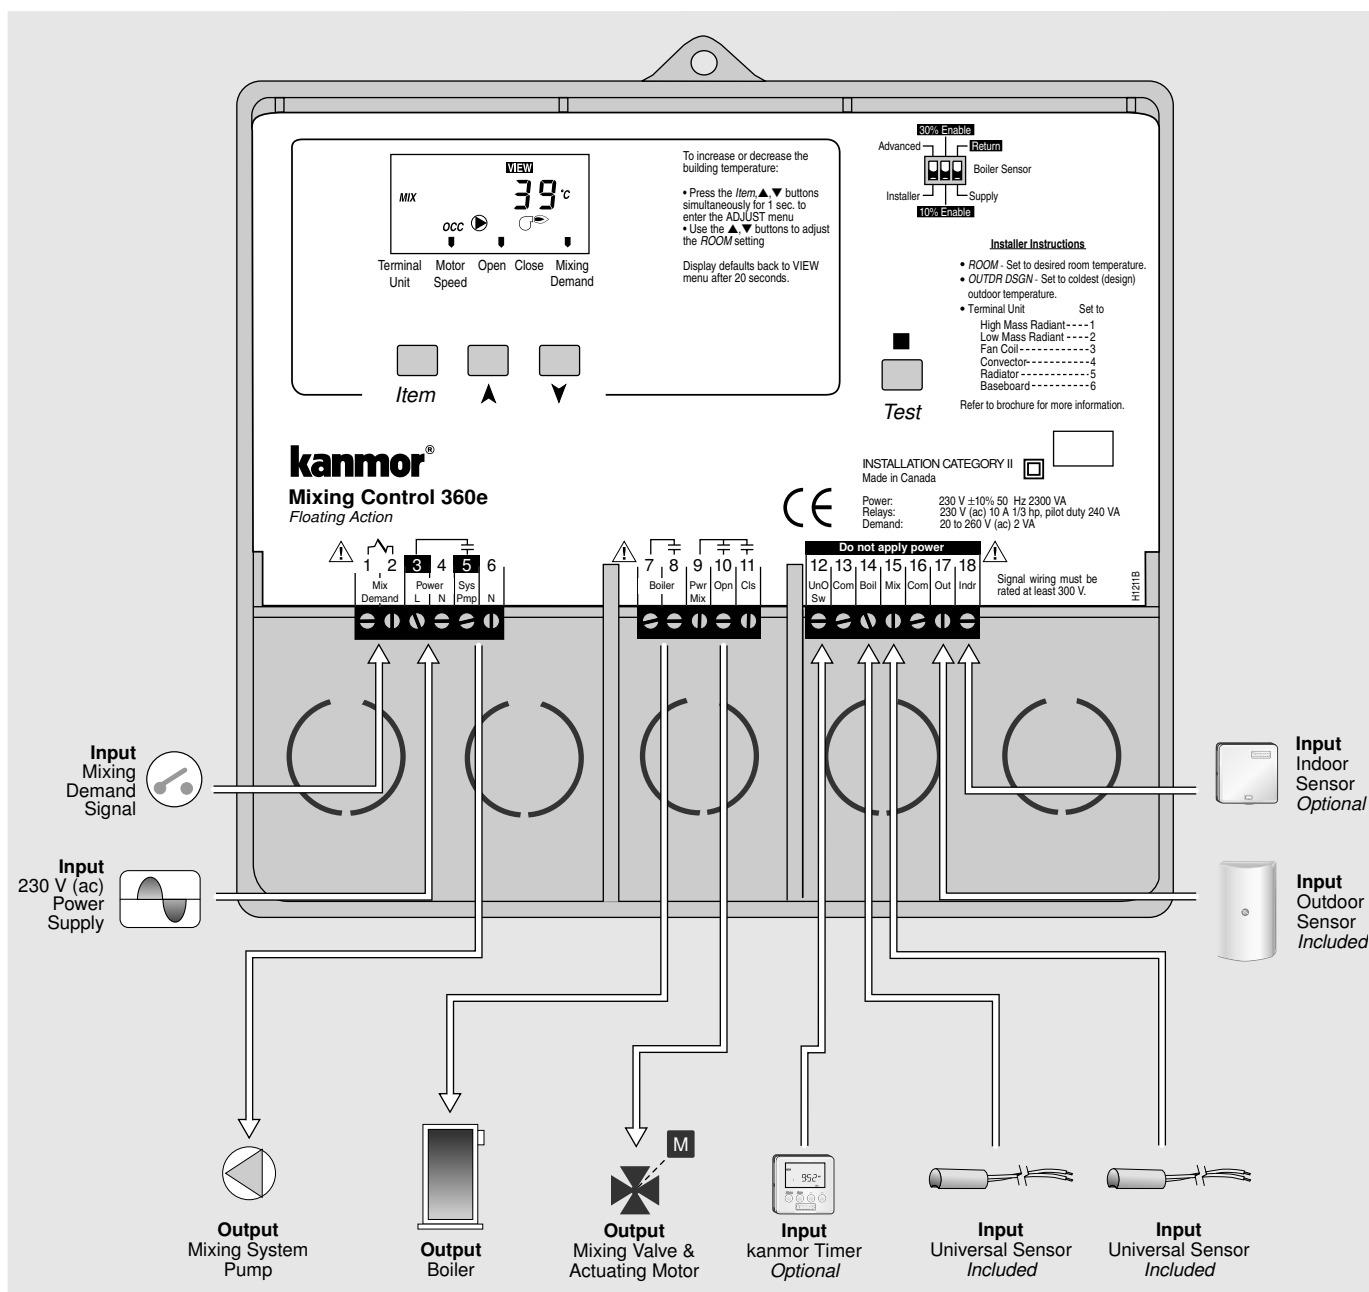

How To Use The Data Brochure

This brochure is organized into four main sections. They are: 1) *Sequence of Operation*, 2) *Installation*, 3) *Control Settings*, and 4) *Troubleshooting*. The *Sequence of Operation* section has three sub-sections. We recommend reading Section A: *General Operation of the Sequence of Operation*, as this contains important information on the overall operation of the control. Then read the sub-sections that apply to your installation. For quick installation and setup of the control, refer to the *Installation* section, *DIP Switch Settings* section, followed by the *Quick Setup* section.

The *Control Settings* section (starting at *DIP Switch Settings*) of this brochure describes the various items that are adjusted and displayed by the control. The control functions of each adjustable item are described in the *Sequence of Operation*.

Table of Contents

User Interface.....Pg 2	DIP Switch Settings.....Pg 13
Description of Display ElementsPg 3	Quick Setup.....Pg 14
Sequence of OperationPg 4	Control Settings.....Pg 15
<i>Section A: General Operation</i>Pg 4	<i>View Menu</i>Pg 15
<i>Section B: Mixing</i>Pg 5	<i>Adjust Menu</i>Pg 16
<i>Section C: Boiler Operation</i>Pg 8	Testing and TroubleshootingPg 17
Installation.....Pg 10	<i>Error Messages</i>Pg 19
Electrical Connections.....Pg 10	Technical DataPg 20
Testing The Wiring.....Pg 12	Limited WarrantyPg 20
Cleaning.....Pg 13	

User Interface

The 360e uses a Liquid Crystal Display (LCD) as the method of supplying information. You use the LCD in order to set up and monitor the operation of your system. The 360e has three push buttons (*Item*, ▲, ▼) for selecting, viewing, and adjusting settings. As you program your control, record your settings in the ADJUST menu table which is found in the second half of this brochure.

Item

The abbreviated name of the selected item will be displayed in the item field of the display. To view the next available item, press and release the *Item* button. Once you have reached the last available item, pressing and releasing the *Item* button will return the display to the first item.



Adjust

To make an adjustment to a setting in the control, press and hold simultaneously for 1 second the *Item*, ▲ and ▼ buttons. The display will then show the word ADJUST in the top right corner. Then select the desired item using the *Item* button. Finally use the ▲ and/or ▼ button to make the adjustment.



To exit the ADJUST menu, either select the ESC item and press the ▲ or ▼ button, or leave the adjustment buttons alone for 20 seconds.

When the *Item* button is pressed and held in the VIEW menu, the display scrolls through all the adjust items in both access levels.

Additional information can be gained by observing the status field and pointers of the LCD. The status field will indicate which of the control's outputs are currently active. Most symbols in the status field are only visible when the VIEW menu is selected.

Display

Item Field

Displays an abbreviated name of the selected item

Number Field

Displays the current value of the selected item



Menu Field
Displays the current menu

Status Field

Displays the current status of the control's inputs, outputs and operation






Item



Buttons

Selects Menus, Items and adjusts settings

Symbol Description

 Pump Displays when the mixing system pump is in operation.	UNOCC Unoccupied Schedule Displays when the control is in unoccupied (Night) mode.
 Burner Displays when the boiler relay is turned on.	°F, °C °F, °C Displays the unit of measure that all of the temperatures are to be displayed in the control.
OCC Occupied Schedule Displays when the control is in occupied (Day) mode.	 Pointer Displays the control operation as indicated by the text.

Definitions

The following defined terms and symbols are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.



- Warning Symbol: Indicates presence of hazards which can cause severe personal injury, death or substantial property damage if ignored.



- Double insulated

**INSTALLATION
CATEGORY II**

- Local level, appliances

Sequence of Operation

Section A
General
Operation
Page 4 - 5

Section B
Mixing
Reset
Page 5 - 8

Section C
Boiler
Operation
Page 8 - 9

Section A —General Operation

POWERING UP THE CONTROL

When the Mixing Control 360e is powered up, the control displays the control type number in the LCD for 2 seconds. Next, the software version is displayed for 2 seconds. Finally, the control enters into the normal operating mode.

OPERATION


The 360e uses a floating action mixing valve to vary the supply water temperature to a hydronic system. The supply water temperature is based on either the current outdoor temperature, or a fixed setpoint.

Outdoor Reset

When the outdoor design (OUTDR DSGN) setting is not set to OFF, the 360e calculates a mixing supply water temperature based on the outdoor air temperature. The 360e uses a *Characterized Heating Curve* and optionally indoor temperature feedback from an indoor sensor in this calculation.

Setpoint Control

When the outdoor design (OUTDR DSGN) setting is set to OFF, the 360e supplies a fixed mixing supply temperature equal to the MIX TARGET setting. An outdoor sensor is not required during this mode of operation.

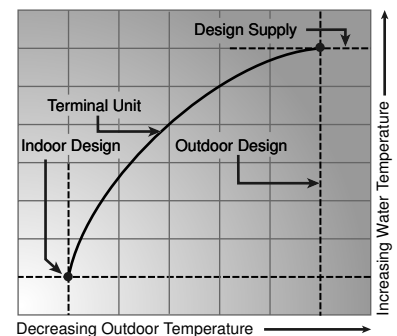


FLOATING ACTION

A floating action actuator motor is connected to the 360e on the *Pwr Mix*, *Opn*, and *Cls* terminals (9,10 and 11). The 360e pulses the actuator motor open or close to maintain the correct mixed supply water temperature at the mix sensor when there is a mixing demand. The mixing valve that the actuator is connected to can be either a 2-way, 3-way, or 4-way valve. A visual indication as to whether the control is currently opening or closing the mixing valve is displayed in the LCD.

BOILER PROTECTION (BOIL MIN)

The 360e is capable of providing boiler protection from cold mixing system return water temperatures. If the boiler sensor temperature is cooler than the BOIL MIN setting while the boiler is firing, the 360e reduces the output to the mixing valve. This limits the amount of cool return water to the boiler and allows the boiler temperature to recover. This feature can only be used if a boiler sensor is installed.

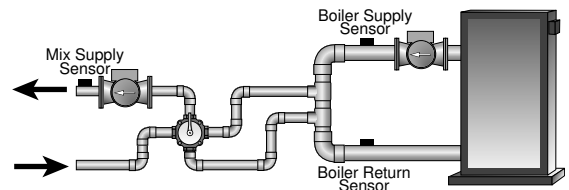


EXERCISING

The 360e has a built-in exercising function. If the system pump or valve has not been operated at least once every 3 days, the control turns on the output for a minimum of 10 seconds. This minimizes the possibility of a pump or valve seizing during a long period of inactivity. The 360e ensures that the mixing valve operates over its entire range at least once each exercising period. While the control is exercising the *Test* LED flashes.

Note: The exercising function does not work if power to the control, pump, or valve is disconnected.

SETBACK (UNOCCUPIED)

To provide greater energy savings, the 360e has a setback capability. With setback, the supply water temperature in the system is reduced when the building is unoccupied. By reducing the supply water temperature, air temperature in the space may be reduced even when thermostat(s) are not turned down. Any time the *UnO Sw* (12) and the *Com* (13) terminals are shorted together, the control operates in the unoccupied (Night) mode. When in the unoccupied (Night) mode, the UNOCC segment is displayed in the LCD. The 360e adjusts the supply water temperature based on the UNOCC settings made in the control. This feature has no effect when the control is used as a setpoint control.

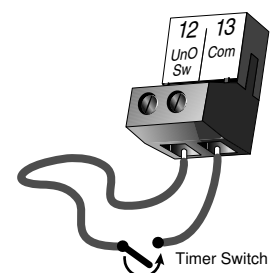

FACTORY DEFAULTS

The control comes preset with several factory defaults. These defaults are based on the terminal unit selection (see section B2). To fine-tune building requirements, these defaults may be changed. If a factory default value for a terminal unit is changed, the terminal unit number will flash when selected in the ADJUST menu.

To reload the factory defaults listed in section B2, power down the control and wait for 10 seconds. Power up the control while simultaneously holding the **Item** and ▼ buttons. The terminal unit number should now be displayed constantly in the LCD rather than flashing.

Section B: Mixing

Section B1
General


Section B2
Installer

Section B3
Advanced

Section B1: General

MIXING DEMAND

A mixing demand is required in order for the 360e to provide heat. A mixing demand is generated by applying a voltage between 24 and 230 V (ac) across the *Mixing Demand* terminals (1 and 2). Once voltage is applied, the *Mixing Demand* pointer is displayed in the LCD. If the 360e is not in WWSD, the 360e closes the *Sys Pmp* contact. The 360e calculates a MIX TARGET supply temperature based on the outdoor air temperature and settings. If required, the 360e operates the boiler in order to provide heat to the mixing valve.

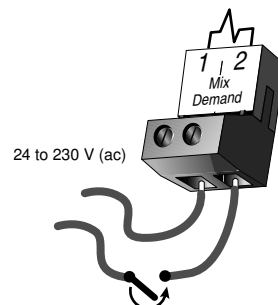

SYSTEM PUMP OPERATION (SYS PMP)

The system pump contact (Sys Pmp, terminal 5) closes whenever there is a mixing demand and the 360e is not in WWSD. The system pump segment is displayed in the LCD. After the mixing demand has been satisfied, the 360e continues to operate the system pump for 20 seconds. This allows some residual heat to be purged out to the heating system. During WWSD, the system pump is operated based on the exercise function.

INDOOR SENSOR

An indoor sensor may be used in order to provide indoor temperature feedback. The indoor sensor is connected to the *Com* and *Indr* terminals (16 and 18). In addition, power must be applied to the *Mixing Demand* terminals (1 and 2) as described in the MIXING DEMAND section. With the indoor sensor connected, the 360e is able to sense the actual room temperature. Indoor temperature feedback fine-tunes the supply water temperature in the mixing system to maintain room temperature. To adjust the room temperature, use the ROOM OCC or ROOM UNOCC setting in the ADJUST menu at the control.

If a multiple zone system is used with an indoor sensor, proper placement of the indoor sensor is essential. The indoor sensor should be located in an area which best represents the average air temperature of the zones.

CHARACTERIZED HEATING CURVE

When used as a mixing reset control, the 360e varies the supply water temperature based on the outdoor air temperature. The control takes into account the type of terminal unit that the system is using. Since different types of terminal units transfer heat to a space using different proportions of radiation, convection and conduction, the supply water temperature must be controlled differently. Once the control is told what type of terminal unit is used, the control varies the supply water temperature according to the type of terminal unit. This improves the control of the air temperature in the building.


MIXING TARGET TEMPERATURE (MIX TARGET)

When used as a mixing reset control, the MIX TARGET temperature is calculated from the *Characterized Heating Curve* settings, outdoor air temperature and optionally, indoor air temperature. When used as a setpoint control, the installer sets the MIX TARGET temperature. The control displays the temperature that it is currently trying to maintain as the mixing supply temperature. If the control does not have a mixing demand, " - - " is displayed as the MIX TARGET.

Section B2: Installer

OUTDOOR DESIGN (OUTDR DSGN)

The OUTDR DSGN is the outdoor air temperature that is the typical coldest temperature of the year where the building is located. This temperature is used when doing the heat loss calculations for the building. If a cold outdoor design temperature is selected, the mixing supply temperature rises gradually as the outdoor temperature drops. If a warm outdoor design temperature is selected, the mixing supply temperature rises rapidly as the outdoor temperature drops.

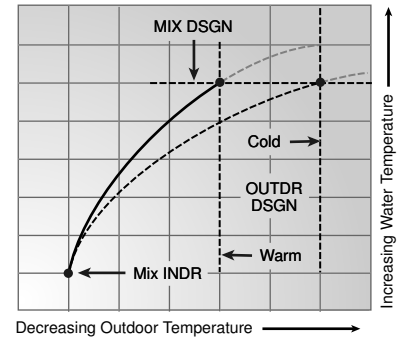


SETPOINT OPERATION (MIX TARGET)

For setpoint control, set the OUTDR DSGN to OFF. The MIX TARGET becomes the setpoint supply temperature that the control is to maintain. The MIX TARGET temperature is set by the installer in the ADJUST menu. An outdoor sensor is not required during this mode of operation.

ROOM OCC & UNOCC (ROOM)

The ROOM is the desired room temperature for the mixing zones, and it provides a parallel shift of the *Characterized Heating Curve*. The room temperature desired by the occupants is often different from the design indoor temperature (MIX INDR). If the room temperature is not correct, adjusting the ROOM setting increases or decreases the amount of heat available to the building. A ROOM setting is available for both the occupied (Day) and unoccupied (Night) modes.

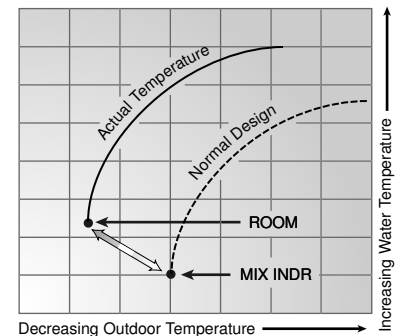

TERMINAL UNITS


When using a *Characterized Heating Curve*, the control requires the selection of a terminal unit. The terminal unit determines the shape of the *Characterized Heating Curve* according to how the terminal unit delivers heat into the building space. The 360e provides for selection between six different terminal unit types: two types of radiant floor heat, fancoil, fin-tube convector, radiator, and baseboard. When a terminal unit is selected, the control automatically loads the design supply temperature (MIX DSGN), maximum supply temperature (MIX MAX) and minimum supply temperature (MIX MIN). The factory defaults are listed below. To change defaults, refer to section B3. If a default has been changed, refer to Section A to reload the factory defaults.

TERMINAL UNIT	HIGH MASS RADIANT (1)	LOW MASS RADIANT (2)	FANCOIL (3)	FIN-TUBE CONVECTOR (4)	RADIATOR (5)	BASEBOARD (6)
MIX DSGN	120°F (49°C)	140°F (60°C)	190°F (88°C)	180°F (82°C)	160°F (71°C)	150°F (66°C)
MIX MAX	140°F (60°C)	160°F (71°C)	210°F (99°C)	200°F (93°C)	180°F (82°C)	170°F (77°C)
MIX MIN	OFF	OFF	100°F (38°C)	OFF	OFF	OFF

High Mass Radiant (1)

This type of a hydronic radiant floor is embedded in either a thick concrete or gypsum pour. This heating system has a large thermal mass and is slow acting.


Default values: MIX DSGN = 120°F (49°C), MIX MAX = 140°F (60°C), MIX MIN = OFF

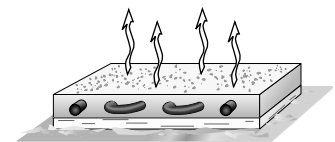

Low Mass Radiant (2)

This type of radiant heating system is either attached to the bottom of a wood sub-floor, suspended in the joist space, or sandwiched between the sub-floor and the surface. This type of radiant system has a relatively low thermal mass and responds faster than a high mass system.


Default values: MIX DSGN = 140°F (60°C), MIX MAX = 160°F (71°C), MIX MIN = OFF

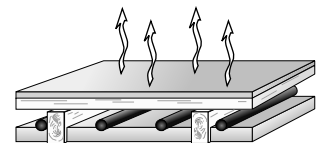

Fancoil (3)

A fancoil terminal unit or air handling unit (AHU) consists of a hydronic heating coil and either a fan or blower. Air is forced across the coil at a constant velocity by the fan or blower, and is then delivered into the building space.


Default values: MIX DSGN = 190°F (88°C) MIX MAX = 210°F (99°C), MIX MIN = 100°F (38°C)

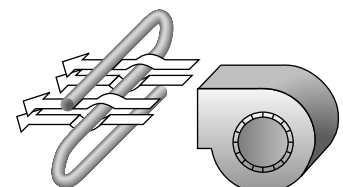

Fin-tube Convector (4)

A convector terminal unit is made up of a heating element with fins on it. This type of terminal unit relies on the natural convection of air across the heating element to deliver heated air into the space. The amount of natural convection to the space is dependant on the supply water temperature to the heating element and the room air temperature.


Default values: MIX DSGN = 180°F (82°C), MIX MAX = 200°F (93°C), MIX MIN = OFF

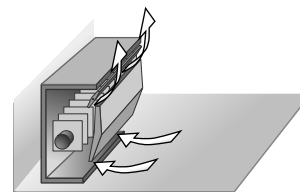

Radiator (5)

A radiator terminal unit has a large heated surface that is exposed to the room. A radiator provides heat to the room through radiant heat transfer and natural convection.


Default values: MIX DSGN = 160°F (71°C), MIX MAX = 180°F (82°C), MIX MIN = OFF

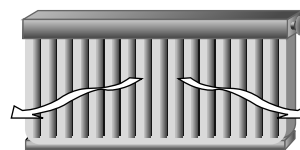

Baseboard (6)

A baseboard terminal unit is similar to a radiator, but has a low profile and is installed at the base of the wall. The proportion of heat transferred by radiation from a baseboard is greater than that from a fin-tube convector.

Default values: MIX DSGN = 150°F (66°C), MIX MAX = 170°F (77°C), MIX MIN = OFF



Section B3: Advanced

MIXING INDOOR (MIX INDR)

The MIX INDR is the room temperature used in the original heat loss calculations for the building. This setting establishes the beginning of the *Characterized Heating Curve* for the mixing zones.

MIXING DESIGN (MIX DSGN)

The MIX DSGN temperature is the supply water temperature required to heat the mixing zones when the outdoor air is as cold as the OUTDR DSGN temperature.

MIXING MAXIMUM (MIX MAX)


The MIX MAX sets the highest water temperature that the control is allowed to calculate as the MIX TARGET temperature. If the control does target the MIX MAX setting, and the MIX temperature is near the MIX MAX, the MAX segment will be displayed in the LCD while either the MIX TARGET temperature or the MIX temperature is being viewed.

MIXING MINIMUM (MIX MIN)

The MIX MIN is the lowest temperature that the control is allowed to use as a MIX TARGET temperature. During mild conditions, if the 360e calculates a MIX TARGET temperature that is below the MIX MIN setting, the MIX TARGET temperature is adjusted to match the MIX MIN setting. During this condition, the MIN segment will be displayed in the LCD when either the MIX TARGET or MIX temperature is being viewed. If an indoor sensor is used, and the 360e is operating at the MIX MIN temperature, the system pump is cycled using Pulse Width Modulation (PWM) with a 15 minute cycle length. By cycling the system pump and controlling the flow of supply water, the control provides an average supply water temperature to the system. This average temperature is equal to the original MIX TARGET. This minimizes overheating of the zone while the control is operating at the MIX MIN temperature.

WARM WEATHER SHUT DOWN (WWSD) OCC & UNOCC

When the outdoor air temperature rises above the WWSD setting, the 360e turns on the WWSD segment in the display. When the control is in Warm Weather Shut Down, the *Mixing Demand* pointer is displayed if there is a demand. However the control does not operate the heating system to satisfy this demand. If the control is in setpoint mode, the WWSD feature is not functional.

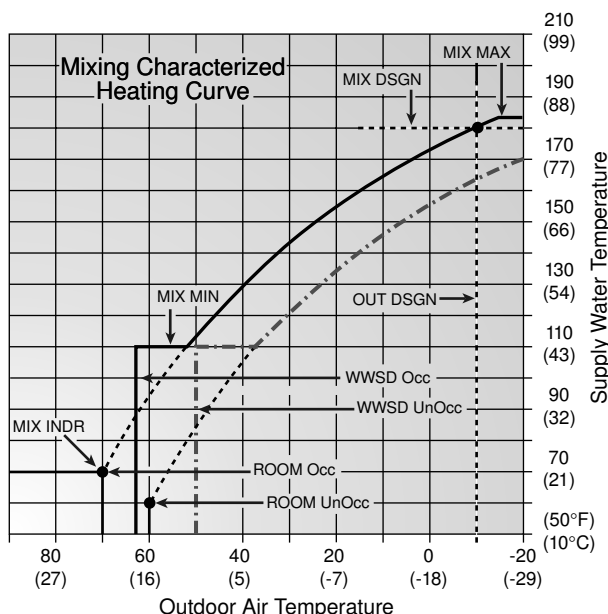

Section C: Boiler Operation

Section C1

General
Operation

Section C2

Boiler Sensor
Placement

Section C1: General Operation

BOILER OPERATION

When the 360e determines that boiler operation is required, the *Boiler* contact terminals (7 and 8) close. While the *Boiler* contact is closed, the burner segment in the LCD is displayed.

BOILER MINIMUM (BOIL MIN)

Most boilers require a minimum water temperature in order to prevent flue gas condensation. The BOIL MIN adjustment is set to the boiler manufacturer's minimum recommended operating temperature. Only when the boiler temperature is measured by a boiler sensor can the 360e provide boiler protection. In this case when the boiler is firing and the boiler temperature is below the BOIL MIN Setting the 360e turns on the MIN segment and reduces the heating load on the boiler by limiting the output of the mixing valve. If the installed boiler is designed for low temperature operation, set the BOIL MIN adjustment to OFF.

BOILER PROTECTION


Refer to section A for a description of boiler protection.

Section C2: Boiler Sensor Placement

BOILER SENSOR ON THE SUPPLY (Boiler Sensor DIP switch = Supply) —


The boiler sensor can be located on the boiler supply if the 360e is the only control that is operating the boiler. When in the supply mode, the 360e determines the required operating temperature of the boiler using *Boiler Load Reset*. With *Boiler Load Reset*, the 360e operates the boiler at the lowest possible supply temperature that is sufficient to satisfy the requirements of the mixing valve. If this mode of operation is selected, the boiler pump should either operate continuously, or be operated in parallel with the system pump contact (*Sys Pmp*).

Note: The boiler pump should not be operated by the boiler's aquastat, as this may lead to improper cycling of the boiler because of inconsistent flow past the boiler supply sensor.

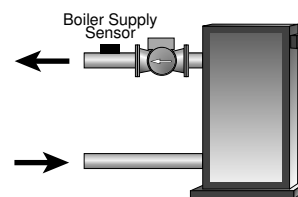

BOILER DIFFERENTIAL (BOIL DIFF)


An on / off heat source such as a boiler must be operated with a differential in order to prevent short cycling. When the boiler supply temperature drops below the bottom rail of the differential, the 360e closes the *Boiler* contact to fire the boiler. When the boiler supply temperature rises above the top rail of the differential, the 360e opens the *Boiler* contact to turn off the boiler. With the 360e, either a fixed or automatic differential setting is selected. If automatic differential (**Ad**) is selected, the 360e automatically adjusts the boiler differential under the current load conditions to avoid short cycling.

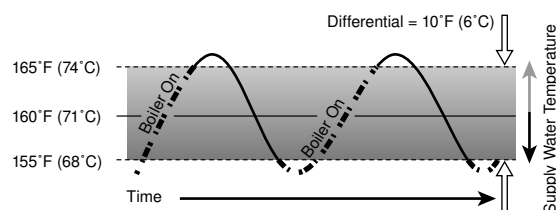

BOILER SENSOR ON THE RETURN (Boiler Sensor DIP switch = Return) —


The boiler sensor should be located on the boiler return if the 360e is one of many controls that can call for boiler operation. When in the return mode, the 360e provides a boiler enable as described in the BOILER ENABLE section. The 360e no longer tries to control the boiler supply water temperature directly but allows the boiler to operate at its operating aquastat setting when required. If this mode of operation is selected, the boiler pump should either operate continuously or be operated in parallel with the system pump contact (*Sys Pmp*).

Note: The boiler pump should not be operated by the boiler's aquastat, as this may lead to improper cycling of the boiler because of inconsistent flow past the boiler return sensor.

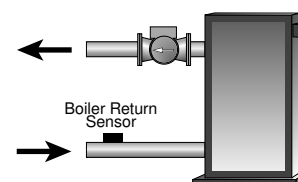

NO BOILER SENSOR

The 360e is capable of operating without a boiler sensor if desired. Without a boiler sensor, the 360e provides a boiler enable as described in the BOILER ENABLE section, but is unable to provide boiler protection. This type of application is typical if the 360e is drawing heat from a heat source that already incorporates some form of boiler protection.

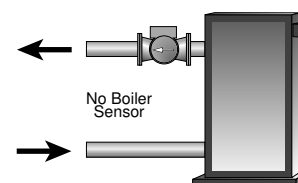

BOILER ENABLE (30% Enable / 10% Enable)

The 360e has a DIP switch that allows for the selection between a 30% boiler enable and a 10% boiler enable. This switch is only functional when the *Boiler Sensor* DIP switch is set to *Return*.

In the 30% position, the 360e closes the *Boiler* contact when the position of the mixing valve exceeds 30%. The *Boiler* contact remains closed until the position of the mixing valve reduces below 15%. This setting would normally be chosen for low mass boilers (copper fin-tube, etc.) or systems with low thermal mass in the loop between the boiler and the mixing valve.

In the 10% position, the 360e closes the *Boiler* contact when the position of the mixing valve exceeds 10%. The *Boiler* contact remains closed until the position of the mixing valve reduces below 5%. This setting is normally chosen for high mass boilers (cast iron, steel, fire-tube, etc.) or systems with large thermal mass in the loop between the boiler and the mixing valve.

In order to prevent short cycling, the *Boiler* contact has a minimum on time, and a minimum off time.

Installation

CAUTION

Improper installation and operation of this control could result in damage to the equipment and possibly even personal injury. It is your responsibility to ensure that this control is safely installed to all applicable codes and standards. This electronic control is not intended for use as a primary limit control. Other controls that are intended and certified as safety limits must be placed into the control circuit. Do not open the control. Refer to qualified personnel for servicing. Opening voids warranty and can result in damage to the equipment and possibly even personal injury.


STEP ONE — GETTING READY

Check the contents of this package. If any of the contents listed are missing or damaged, please contact your wholesaler or kanmor sales representative for assistance.


Type 360e includes: One Mixing Control 360e, One Outdoor Sensor 070e, Two Universal Sensors 071e, Data Brochures D 360e, D 070e, Essay E 021e.

Note: Carefully read the details of the *Sequence of Operation* to ensure that you have chosen the proper control for your application.


STEP TWO — MOUNTING THE BASE

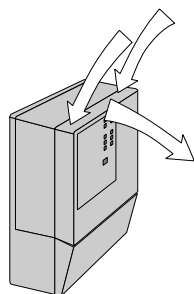


Press down at the fingertip grips on top of the front cover and pull out and down.

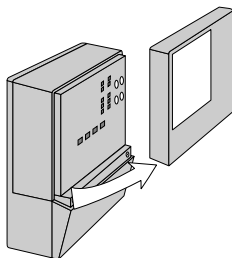


Lift the front cover up and away from the control.

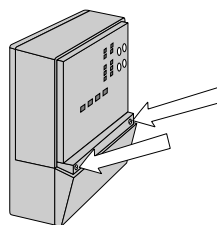


Loosen the screws at the front of the wiring cover.

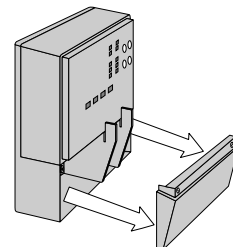


The wiring cover pulls straight out from the wiring chamber.

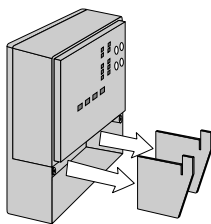


Remove the safety dividers from the wiring chamber by pulling them straight out of their grooves.

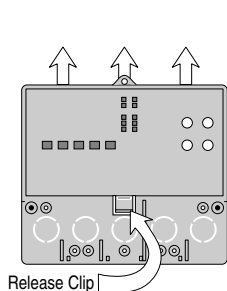

Press the control release clip on the base inside the wiring chamber and slide the control upwards.

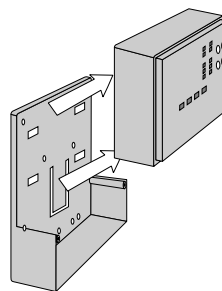


The control lifts up and away from the base.

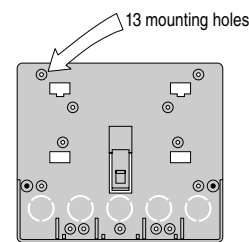


The base is ready for mounting. There are 10 conduit knock-outs at the back and bottom of the wiring chamber.

The control can be mounted on a standard DIN rail. This will be a popular option for those who prefer to mount the control inside a larger electrical panel.

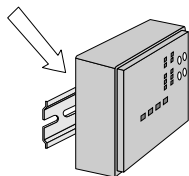

The wiring can enter the bottom or the back of the enclosure. Knock-outs provided in the base allow the wiring to be run in conduit up to the enclosure. The base also has holes that line up with the mounting holes of most common electrical boxes.

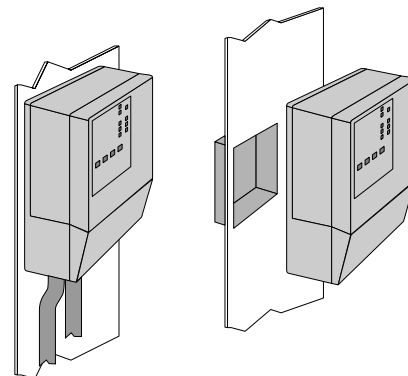

STEP THREE ——— ROUGH-IN WIRING

All electrical wiring terminates in the control base wiring chamber. The base has standard 7/8" (22 mm) knockouts which accept common wiring hardware and conduit fittings. Before removing the knockouts, check the wiring diagram and select those sections of the chamber with common voltages. Do not allow the wiring to cross between sections, as the wires will interfere with safety dividers, which should be installed at a later time.

Power must not be applied to any of the wires during the rough-in wiring stage.

- All wires are to be stripped to a length of 3/8" (9 mm) to ensure proper connection to the control.
- Install the Outdoor Sensor 070e according to the installation instructions in the Data Brochure D 070e and run the wiring back to the control.
- Install the Mixing Sensor 071e according to the installation instructions in the Data Brochure D 070e and run the wiring back to the control.
- If a Boiler Sensor 071e is used, install the sensor according to the installation instructions in the Data Brochure D 070e and run the wiring back to the control.
- If an Indoor Sensor 076e is used, install the sensor according to the installation instructions in the Data Brochure D 070e and run the wiring back to the control.
- Run wire from other system components (pumps, boilers, etc.) to the control.
- Run wires from the 230 V (ac) power to the control. Use a clean power source with a 15 A circuit to ensure proper operation. Multi-strand 16 AWG wire is recommended for all 230 V (ac) wiring due to its superior flexibility and ease of installation into the terminals.

STEP FOUR ——— ELECTRICAL CONNECTIONS TO THE CONTROL

The installer should test to confirm that no voltage is present at any of the wires. Push the control into the base and slide it down until it snaps firmly into place.


⚠ **Powered Input Connections**

230 V (ac) Power

Connect the 230 V (ac) power supply to the *Power L* and *Power N* terminals (3 and 4). This connection provides power to the microprocessor and display of the control. As well, this connection provides power to the *Sys Pmp* terminal (5) from the *Power L* terminal (3).

Mixing Demand


To generate a mixing demand, a voltage between 24 V (ac) and 230 V (ac) must be applied across the *Mixing Demand* terminals (1 and 2).

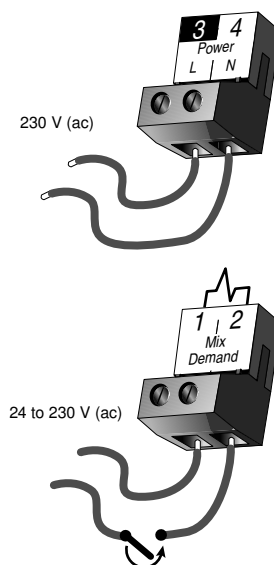

⚠ Output Connections


System Pump Contact (Sys Pmp)

The *Sys Pmp* output terminal (5) on the 360e is a powered output. When the relay in the 360e closes, 120 V (ac) is provided to the *Sys Pmp* terminal (5) from the *Power L* terminal (3). To operate the system pump, connect one side of the system pump circuit to terminal (5), and the second side of the pump circuit to the neutral (*N*) terminal 6.

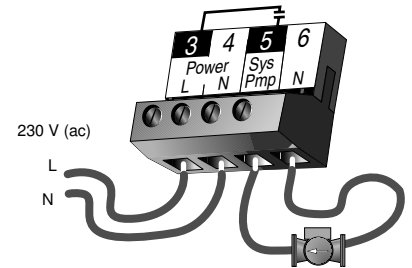


Mixing Valve Actuator

Terminals 9, 10 and 11 are isolated outputs from the control. Connect one side of the actuator power to the *Pwr Mix* terminal (9) on the control. The output relay *Opn* (10) is then connected to the open terminal of the actuator and the output relay *Cls* (11) is connected to the close terminal of the actuator. Connect the second side of the actuator power to the common terminal of the actuator.

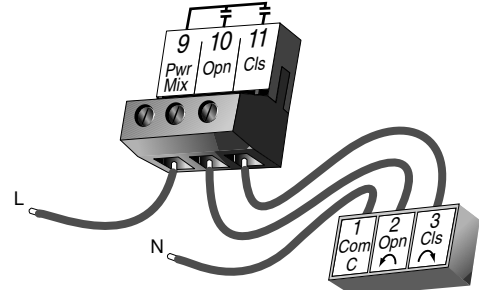

Boiler Contact

The *Boiler* terminals (7 and 8) are an isolated output in the 360e. There is no power available on these terminals from the control. These terminals are to be used as a switch to either make or break the boiler circuit. When the 360e requires the boiler to fire, it closes the contact between terminals 7 and 8.

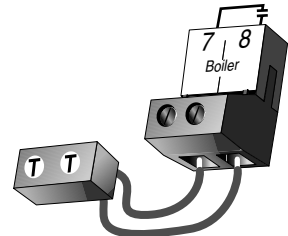


⚠ Sensor and Unpowered Input Connections

Do not apply power to these terminals as this will damage the control.


Outdoor Sensor

Connect the two wires from the Outdoor Sensor 070e to the *Com* and *Out* terminals (16 and 17). The outdoor sensor is used by the 360e to measure the outdoor air temperature

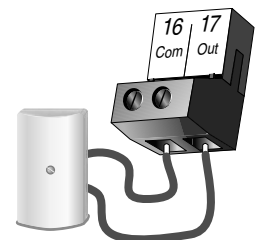


Boiler Sensor

Connect the two wires from the Boiler Sensor 071e to the *Com* and *Boil* terminals (13 and 14). The boiler sensor is used by the 360e to measure boiler temperature.

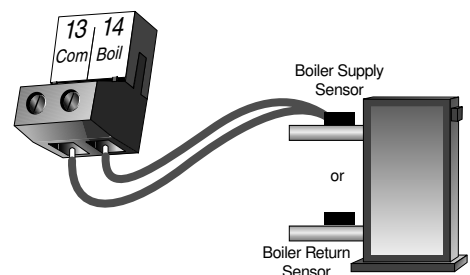


Mixing Sensor

Connect the two wires from the Mixing Sensor 071e to the *Com* and *Mix* terminals (13 and 15). The mixing sensor is used by the 360e to measure the supply water temperature after the mixing valve. Normally the sensor is attached to the pipe downstream of the system pump.

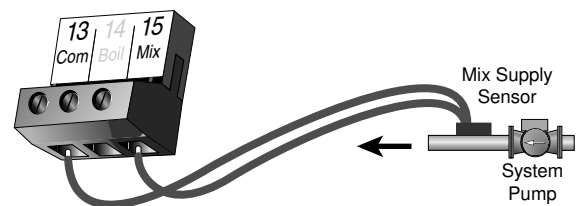


Indoor Sensor

If an indoor sensor is used, connect the two wires from the sensor to the *Com* and *Indr* terminals (16 and 18). The indoor sensor is used by the 360e to measure the room air temperature.

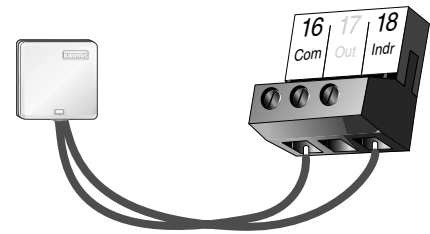

Unoccupied Switch

If an external timer (kanmor Timer 032e) or switch is used, connect the two wires from the external switch to the *UnO Sw* and *Com* terminals (12 and 13). When these two terminals are shorted together, the control registers an unoccupied signal.

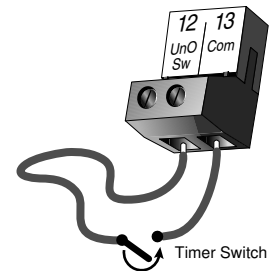

STEP FIVE — TESTING THE WIRING


Each terminal block **must be unplugged** from its header on the control before power is applied for testing. To remove a terminal block, pull it straight down from the control.

The following tests are to be performed using standard testing practices and procedures, and should only be carried out by properly trained and experienced persons.

A good quality electrical test meter, capable of reading from at least 0 -300 V (ac) and at least 0 -2,000,000 Ohms, is essential to properly test the wiring and sensors.


⚠ Test The Sensors

In order to test the sensors, the actual temperature at each sensor location must be measured. A good quality digital thermometer with a surface temperature probe is recommended for ease of use and accuracy. Where a digital thermometer is not available, a spare sensor can be strapped alongside the one to be tested, and the readings compared. Test the sensors according to the instructions in the Data Brochure D 070e.

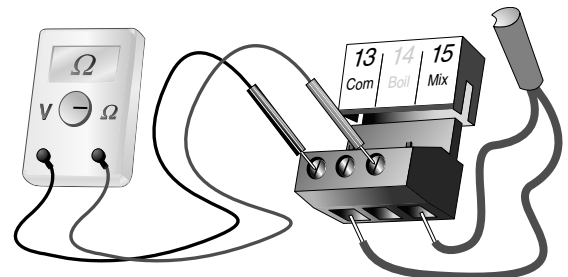

⚠ Test The Power Supply


Make sure exposed wires and bare terminals are not in contact with other wires or grounded surfaces. Turn on the power and measure the voltage between the *Power L* and *Power N* terminals (3 and 4) using an AC voltmeter. The reading should be between 207 and 253 V (ac).

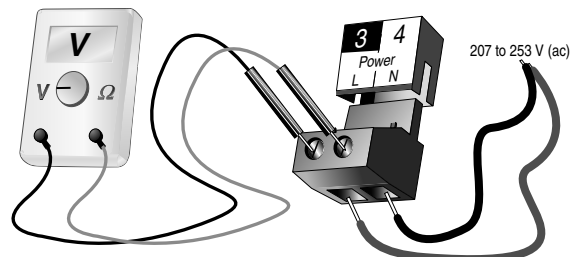

⚠ Test The Powered Inputs

Mixing Demand


Measure the voltage between the *Mixing Demand* terminals (1 and 2). When the mixing demand device calls for heat, you should measure between 20 and 260 V (ac) at the terminals. When the mixing demand device is off, you should measure less than 5 V (ac).

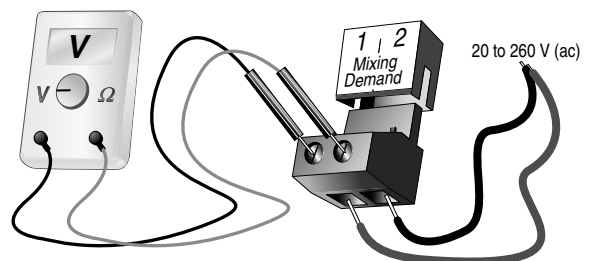

⚠ Test The Outputs

System Pump (Sys Pmp)

If a system pump is connected to the *Sys Pmp* terminal (5) and N terminal (6), make sure that power to the terminal block is off, and install a jumper between the *Power L* and the *Sys Pmp* terminals (3 and 5). Install a second jumper between the *Power N* and N terminals (4 and 6). When power is applied to the *Power L* and *Power N* terminals (3 and 4), the system pump should start. If the pump does not turn on, check the wiring between the terminal block and pump, and refer to any installation or troubleshooting information supplied with the pump. If the pump operates properly, disconnect the power and remove the jumpers.

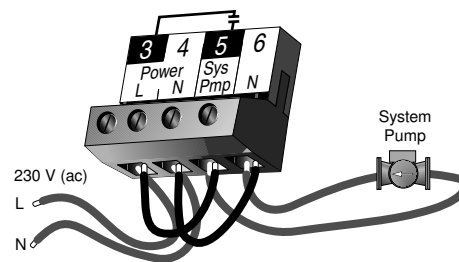

Boiler

If the boiler circuit is connected to the *Boiler* terminals (7 and 8), make sure power to the boiler circuit is off, and install a jumper between the terminals. When the boiler circuit is powered up, the boiler should fire. If the boiler does not turn on, refer to any installation or troubleshooting information supplied with the boiler (The boiler may have a flow switch that prevents firing until the boiler loop pump is running). If the boiler operates properly, disconnect the power and remove the jumper.

Mixing Valve Actuator

Make sure power to the actuator circuit is off and install a jumper between the *Pwr Mix* (9) and the *Opn* (10) terminals. When the circuit is powered up, the actuator should move in the open direction. If it does not, check the wiring between the terminals and the actuator. Refer to any installation or troubleshooting information supplied with the actuator. If the motor closes instead of opening, the wiring of the actuator must be reversed. If the valve opens correctly, turn off the power to the circuit and remove the jumper. Install a jumper between the *Pwr Mix* (9) and the *Cls* (11) terminals. When the circuit is powered up, the valve should move in the closing direction. If it does not, check the wiring between the terminals and the actuator. Refer to any installation or troubleshooting information supplied with the motor. If the motor closes correctly, turn off the power to the circuit and remove the jumper.


⚠ Connecting The Control

Make sure all power to the devices and terminal blocks is off, and remove any remaining jumpers from the terminals.

Reconnect the terminal blocks to the control by carefully aligning them with their respective headers on the control, and then pushing the terminal blocks into the headers. The terminal blocks should snap firmly into place.

Install the supplied safety dividers between the unpowered sensor inputs and the powered 230 V (ac) or 24 V (ac) wiring chambers.

Apply power to the control. The operation of the control on power up is described in the Sequence of Operation section of this brochure.

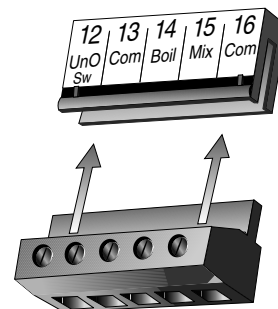


Cleaning

The control's exterior can be cleaned using a damp cloth. Moisten cloth with water and wring out prior to wiping control. Do not use solvents or cleaning solutions.

DIP Switch Settings

The DIP Switch settings on the control are very important and should be set to the appropriate settings prior to making any adjustments to the control through the user interface. The DIP switch settings change the items that are available to be viewed and / or adjusted in the user interface.

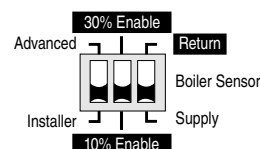

ADVANCED / INSTALLER

The *Advanced / Installer* DIP switch is used to select which items are available to be viewed and / or adjusted in the user interface.

30% ENABLE / 10% ENABLE

The position of the *30% Enable / 10% Enable* DIP switch determines at which valve position the control will close the Boiler contact under normal conditions. This switch is only operational if the *Boiler Sensor* DIP switch is set to *Return*. Refer to section C2.

BOILER SENSOR (RETURN / SUPPLY)

The Boiler Sensor DIP switch selects the installation location for the boiler sensor. When the boiler sensor is installed on the supply side of the boiler loop, the DIP switch must be set to *Supply*. The boiler aquastat should be set at least 20 °F (11 °C) higher than the required design boiler water temperature. The boiler is controlled as described in section C.


For systems where the 360e provides a heat demand to an external boiler control, the boiler sensor should be installed on the return side of the boiler loop. When the boiler sensor is installed on the return side of the boiler loop, the DIP switch must be set to *Return*. The 360e enables the boiler when the position of the mixing valve exceeds the boiler enable DIP switch setting. The Boiler contact is controlled as described in section C. The boiler's operating temperature is controlled by its aquastat, or an external boiler reset control.

Quick Setup

The quick setup can be used for both outdoor reset and setpoint operation. To enter the installer programming mode, set the *Advanced / Installer* DIP switch to *Installer*.


OUTDOOR RESET

Access the ADJUST menu by pressing and holding simultaneously for 1 second, the **Item**, ▲ and ▼ buttons. The display will now show the word ADJUST in the top right corner.

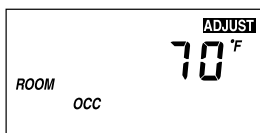


The ROOM OCC adjustment is the first item displayed. Use the ▲ or ▼ button to set the ROOM temperature. The ROOM OCC setting is set to the desired room air temperature during the occupied (Day) mode.

Note: To increase or decrease space temperature during the occupied (Day) mode, only adjust the ROOM OCC setting.

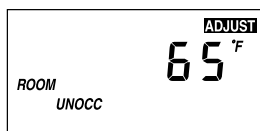


Press and release the **Item** button to advance to the ROOM UNOCC adjustment. Use the ▲ or ▼ button to set the desired temperature. The ROOM UNOCC setting is set to the desired room air temperature during the unoccupied (Night) mode.


Note: To increase or decrease space temperature during the unoccupied (Night) mode, only adjust the ROOM UNOCC setting.

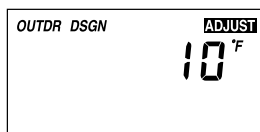


Press and release the **Item** button to advance to the OUTDR DSGN adjustment. Use the ▲ or ▼ button to set the outdoor design temperature. The OUTDR DSGN setting is set to the typical coldest temperature of the year.

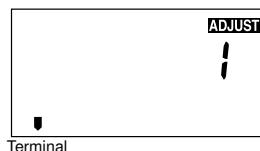

Press and release the **Item** button to advance to the *Terminal Unit* adjustment. Use the ▲ or ▼ button to select the desired terminal unit. The terminal unit number corresponds to the type of terminal that is being used. The table below lists the terminal units and their default values.

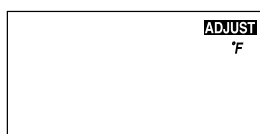

Press and release the **Item** button to advance to the units adjustment. Use the ▲ or ▼ button to set the scale to °F or °C.

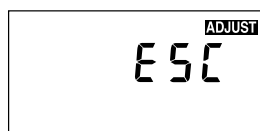

To exit the ADJUST menu, press and release the **Item** button to advance to the ESC item. Then either press the ▲ or ▼ button, or leave the buttons alone for 20 seconds.

TERMINAL UNIT	HIGH MASS RADIANT (1)	LOW MASS RADIANT (2)	FANCOIL (3)	FIN-TUBE CONVECTOR (4)	RADIATOR (5)	BASEBOARD (6)
MIX DSGN	120°F (49°C)	140°F (60°C)	190°F (88°C)	180°F (82°C)	160°F (71°C)	150°F (66°C)
MIX MAX	140°F (60°C)	160°F (71°C)	210°F (99°C)	200°F (93°C)	180°F (82°C)	170°F (77°C)
MIX MIN	OFF	OFF	100°F (38°C)	OFF	OFF	OFF

SETPOINT CONTROL

Access the ADJUST menu by pressing and holding simultaneously for 1 second, the **Item**, ▲ and ▼ buttons. The display will now show the word ADJUST in the top right corner.




Press and release the **Item** button to advance to the OUTDR DSGN adjustment. Press and hold the ▲ button until OFF is displayed.



Press and release the **Item** button to advance to the MIX TARGET adjustment. Use the ▲ or ▼ button to select the desired temperature. The MIX TARGET setting is set to the desired setpoint supply temperature.



Press and release the **Item** button to advance to the units adjustment. Use the ▲ or ▼ button to set the scale to °F or °C.


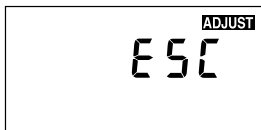

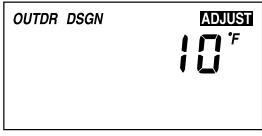
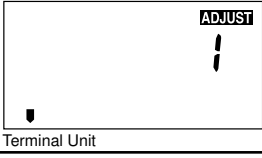
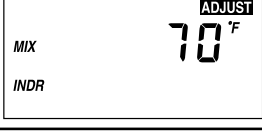

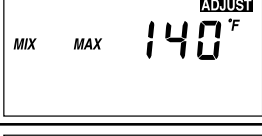
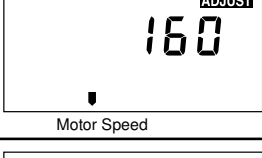
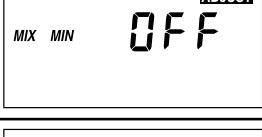
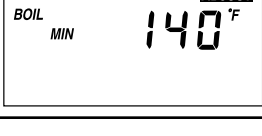


To exit the ADJUST menu, press and release the **Item** button to advance to the ESC item. Then either press the ▲ or ▼ button, or leave the buttons alone for 20 seconds.





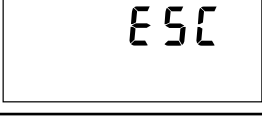
View Menu (1 of 1)

Display	Section	Installer	Advanced	Description	Range
<p>The display shows 'OUTDR' in the top left, 'OCC' in the bottom left, 'VIEW' in the top right, and '50 °F' in the center.</p>		●	●	Current outdoor air temperature as measured by the outdoor sensor. This is also the default display for the control. (OUTDR DSGN ≠ OFF)	-67 to 149°F (-55 to 65°C)
<p>The display shows 'ROOM' in the top left, 'OCC' in the bottom left, 'VIEW' in the top right, and '68 °F' in the center.</p>	B1	●	●	Current room air temperature as measured by the indoor sensor. (Indoor Sensor is present)	23 to 113°F (-5 to 45°C)
<p>The display shows 'MIX' in the top left, 'OCC' in the bottom left, 'VIEW' in the top right, and '100 °F' in the center.</p>	B3	●	●	Current mixed supply water temperature as measured by the mixing sensor	14 to 266°F (-10 to 130°C)
<p>The display shows 'MIX TARGET' in the top left, 'OCC' in the bottom left, 'VIEW' in the top right, and '110 °F' in the center.</p>	B1 B2 B3	●	●	Target mixed supply is the temperature the control is currently trying to maintain at the mixing sensor.	---, 14 to 266°F (---, -10 to 130°C)
<p>The display shows 'BOIL' in the top left, 'OCC' in the bottom left, 'VIEW' in the top right, and '150 °F' in the center.</p>		●	●	Current boiler temperature as measured by the boiler sensor. (Boiler sensor is present)	14 to 266°F (-10 to 130°C)

Adjust Menu (1 of 2)

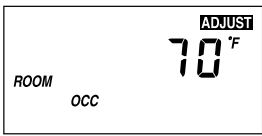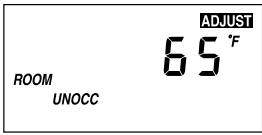

Display	Section	Installer	Advanced	Description	Range	Actual Setting
	B2	●	●	The desired room air temperature during an occupied (Day) period. (OUTDR DSGN ≠ OFF)	35 to 100°F (2 to 38°C)	
	B2	●	●	The desired room air temperature during an unoccupied (Night) period. (OUTDR DSGN ≠ OFF)	35 to 100°F (2 to 38°C)	
	B2	●	●	Mixing setpoint temperature. (OUTDR DSGN = OFF)	60 to 200°F (16 to 93°C)	
	B2	●	●	The design outdoor air temperature used in the heat loss calculation for the heating system. For setpoint operation, set the OUTDR DSGN to OFF	-60 to 32°, OFF (-51 to 0°C, OFF)	
 Terminal Unit	B2	●	●	The type of terminal units that are being used in the heating system. (OUTDR DSGN ≠ OFF)	1 (High Mass Radiant) 2 (Low Mass Radiant) 3 (Fancoil) 4 (Fin-tube Convactor) 5 (Radiator) 6 (Baseboard)	
	B3	●	●	The design indoor air temperature used in the heat loss calculation for the heating system. (OUTDR DSGN ≠ OFF)	35 to 100°F (2 to 38°C)	
	B3	●	●	The design supply water temperature used in the heat loss calculation for the heating system. (OUTDR DSGN ≠ OFF)	70 to 220°F (21 to 104°C)	
	B3	●	●	The maximum supply water temperature for the mixing system (OUTDR DSGN ≠ OFF)	80 to 210°F (27 to 99°C)	
 Motor Speed	A	●	●	The time that the actuating motor requires to operate from fully closed to fully open.	30 to 230 seconds (1 sec. increments)	
	B3	●	●	The minimum supply temperature for the mixing system. (OUTDR DSGN ≠ OFF)	OFF, 35 to 150°F (OFF, 2 to 65°C)	
	C1	●	●	The minimum temperature allowed for the boiler target temperature. (Boiler sensor is present)	OFF, 80 to 180°F (OFF, 27 to 82°C)	

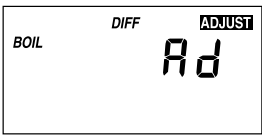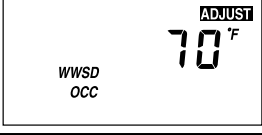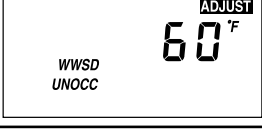Adjust Menu (2 of 2)

Display	Section			Description	Range	Actual Setting
	Installer	Advanced				
	C2		●	The differential that the control is to use when it is operating the boiler. (Boiler Sensor DIP switch = Supply AND Boiler sensor is present)	Ad, 2 to 42°F (Ad, -17 to 6°C)	
	B3		●	The system's warm weather shut down during the occupied (Day) period.	35 to 100°F, OFF (2 to 38°C, OFF)	
	B3		●	The system's warm weather shut down during the unoccupied (Night) period.	35 to 100°F, OFF (2 to 38°C, OFF)	
			●	The units of measure that all of the temperatures are to be displayed in the control.	°F, °C	
			●	This item exits the ADJUST menu by pressing either the ▲ or ▼ button.		

Testing the Control

The Mixing Control 360e has a built-in test routine which is used to test the main control functions. The 360e continually monitors the sensors, and displays an error message whenever a fault is found. See the following pages for a list of the 360e's error messages and possible causes. When the **Test** button is pressed, the test light is turned on. The individual outputs and relays are tested in the following test sequence.


off not testing
red testing
 **red** testing paused

TEST SEQUENCE

Each step in the test sequence lasts 10 seconds.

During the test routine, the test sequence may be paused by pressing the **Test** button. Only if there is a mixing demand can the control be paused in a step. If the **Test** button is not pressed again for 5 minutes while the test sequence is paused, the control exits the entire test routine. If the test sequence is paused, the **Test** button can be pressed again to advance to the next step. This can also be used to rapidly advance through the test sequence. To reach the desired step, repeatedly press and release the **Test** button until the appropriate device and segment in the display turn on.

- Step 1** - The mixing valve is run fully open.
- Step 2** - The mixing valve is run fully closed, and then the system pump (Sys Pmp) is turned on.
- Step 3** - The *Boiler* contact is turned on for 10 seconds. After 10 seconds, the *Boiler* and *Sys Pmp* contacts are shut off.
- Step 4** - After the test sequence is completed, the control resumes its normal operation.

Troubleshooting

When troubleshooting any heating system, it is always a good idea to establish a set routine to follow. By following a consistent routine, many hours of potential headaches can be avoided. Below is an example of a sequence that can be used when diagnosing or troubleshooting problems in a hydronic heating system.

Establish the Problem

Establish the problem. Get as much information from the customer as possible about the problem. Is there too much heat, not enough heat, or no heat? Is the problem only in one particular zone or area of the building, or does the problem affect the entire system? Is this a consistent problem or only intermittent? How long has the problem existed for? This information is critical in correctly diagnosing the problem.

Understanding the Sequence of Operation

Understand the sequence of operation of the system. If a particular zone is not receiving enough heat, which pumps or valves in the system must operate in order to deliver heat to the affected zone? If the zone is receiving too much heat, which pumps, valves, or check valves must operate in order to stop the delivery of heat?

Use the Test Routine

Press the **Test** button on the control and follow the control through the test sequence as described in the Testing section. Pause the control as necessary to ensure that the correct device is operating as it should.

Sketch the Piping in the System

Sketch the piping of the system. This is a relatively simple step that tends to be overlooked, however, it can often save hours of time in troubleshooting a system. Note flow directions in the system paying close attention to the location of pumps, check valves, pressure bypass valves, and mixing valves. Ensure correct flow direction on all pumps. This is also a very useful step if additional assistance is required.

Document the Control

Document the control for future reference. Before making any adjustments to the control, note down all of the items that the control is currently displaying. This includes items such as error messages, current temperatures and settings, and which devices should be operating as indicated by the LCD. This information is an essential step if additional assistance is required to diagnose the problem.


Isolate the Problem

Isolate the problem between the control and the system. Now that the sequence of operation is known and the system is sketched, is the control operating the proper pumps and valves at the correct times? Is the control receiving the correct signals from the system as to when it should be operating? Are the proper items selected in the menus of the control for the device that is to be operated?


Test the Contacts, Voltages and Sensors

Test the contacts, voltages and sensors. Using a multimeter, ensure that the control is receiving adequate voltage to the power terminals and the demand terminals as noted in the technical data. Use the multimeter to determine if the internal contacts on the control are opening and closing correctly. Follow the instructions in the Testing the Wiring section to simulate closed contacts on the terminal blocks as required. Test the sensors and their wiring as described in the sensor Data Brochures.

Error Messages

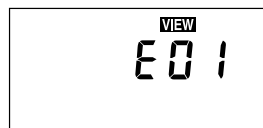


The control was unable to read a piece of information from its EEPROM. This error can be caused by a noisy power source. The control will load the factory defaults and stop operation until all the settings are verified.

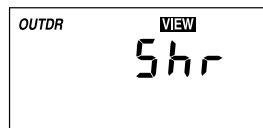


The control is no longer able to read the outdoor sensor due to a short circuit. In this case the control assumes an outdoor temperature of 32°F (0°C) and continues operation. Locate and repair the problem as described in the Data Brochure D 070e. To clear the error message from the control after the sensor has been repaired, press the **Item** button.




The control is no longer able to read the outdoor sensor due to an open circuit. In this case the control assumes an outdoor temperature of 32°F (0°C) and continues operation. Locate and repair the problem as described in the Data Brochure D 070e. To clear the error message from the control after the sensor has been repaired, press the **Item** button.

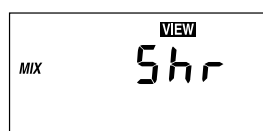


The control is no longer able to read the mixing supply sensor due to a short circuit. In this case the control will operate the mixing valve at a fixed output as long as there is a mixing demand. Locate and repair the problem as described in the Data Brochure D 070e. To clear the error message from the control after the sensor has been repaired, press the **Item** button.

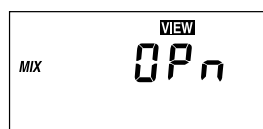


The control is no longer able to read the mixing supply sensor due to a short circuit. In this case the control will operate the mixing valve at a fixed output as long as there is a mixing demand. Locate and repair the problem as described in the Data Brochure D 070e. To clear the error message from the control after the sensor has been repaired, press the **Item** button.

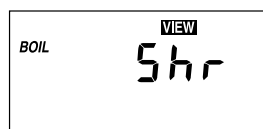

The control is no longer able to read the boiler sensor due to a short circuit. If the BOIL MIN adjustment is higher than 100°F (38°C), the control closes the Boiler contact when the mixing valve starts to operate. The boiler temperature is then limited by the operating aquastat. If the BOIL MIN adjustment is lower than 100°F (38°C), the control does not operate the Boiler contact. Locate and repair the problem as described in the Data Brochure D 070e. To clear the error message from the control after the sensor has been repaired, press the **Item** button.

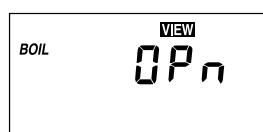

The control is no longer able to read the boiler sensor due to an open circuit. If the BOIL MIN adjustment is higher than 100°F (38°C), the control closes the Boiler contact when the mixing valve starts to operate. The boiler temperature is then limited by the operating aquastat. If the BOIL MIN adjustment is lower than 100°F (38°C), the control does not operate the Boiler contact. Locate and repair the problem as described in the Data Brochure D 070e. If the boiler sensor is deliberately removed, the control must be powered down, and then powered back up. To clear the error message from the control after the sensor has been repaired, press the **Item** button.

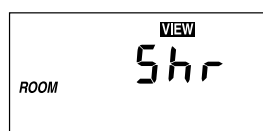

The control is no longer able to read the indoor sensor due to a short circuit. The control will continue to operate as if there was nothing connected to the indoor sensor input. Locate and repair the problem as described in the Data Brochure D 070e. To clear the error message from the control after the sensor has been repaired, press the **Item** button.




The control is no longer able to read the indoor sensor due to an open circuit. The control will continue to operate as if there was nothing connected to the indoor sensor input. Locate and repair the problem as described in the Data Brochure D 070e. If the indoor sensor is deliberately removed, the control must be powered down, and then powered back up. To clear the error message from the control after the sensor has been repaired, press the **Item** button.

Technical Data

Mixing Control 360e Floating Action

Literature	— D 360e, D 070e, E 021e.
Control	— Microprocessor PID control; This is not a safety (limit) control.
Packaged weight	— 2.8 lb. (1250 g), Enclosure A, blue PVC plastic
Dimensions	— 6-5/8" H x 7-9/16" W x 2-13/16" D (170 x 193 x 72 mm)
Approvals	— CE approved, meets ICES & FCC regulations for EMI/RFI.
Ambient conditions	— Indoor use only, 32 to 102°F (0 to 39°C), < 90% RH non-condensing. Altitude <2000 m, Installation Category II, Pollution Category II.
Power supply	— 230 V ±10% 50 Hz 2300 VA
System Pump Relay	— 230 V (ac) 10 A 1/3 hp, pilot duty 240 VA
Boiler Relay	— 230 V (ac) 10 A 1/3 hp, pilot duty 240 VA
Open Relay	— 230 V (ac) 10 A 1/3 hp, pilot duty 240 VA
Close Relay	— 230 V (ac) 10 A 1/3 hp, pilot duty 240 VA
Mix Demand	— 20 to 260 V (ac) 2 VA
Sensors included	— NTC thermistor, 10 kΩ @ 77°F (25°C ±0.2°C) fl=3892 Outdoor Sensor 070e and 2 of Universal Sensor 071e.
Optional devices	— kanmor type #: 032e, 070e, 071e, 076e, 079e.

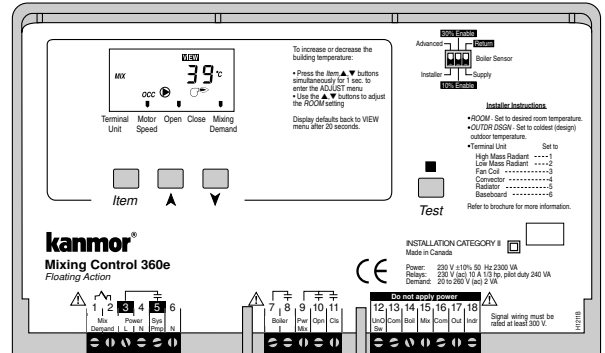

Caution The nonmetallic enclosure does not provide grounding between conduit connections. Use grounding type bushings and jumper wires.

Limited Warranty and Product Return Procedure

Limited Warranty The liability of kanmor Control Systems Ltd. ("kanmor") under this warranty is limited. The Purchaser, by taking receipt of any kanmor product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.

The kanmor Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each kanmor Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with kanmor's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of kanmor under the Limited Warranty shall be limited to, at kanmor's sole discretion: the cost of parts and labor provided by kanmor to repair defects in materials and/or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from kanmor, and, without limiting the foregoing in any way, kanmor is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to kanmor during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the kanmor Limited

Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold kanmor harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than kanmor, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by kanmor; or if the Product was not installed in compliance with kanmor's instructions and/or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with kanmor's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

Product Warranty Return Procedure All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to kanmor through its Representative. If kanmor receives an inquiry from someone other than a kanmor Representative, including an inquiry from Purchaser (if not a kanmor Representative) or Purchaser's customers, regarding a potential warranty claim, kanmor's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.



kanmor Control Systems Ltd.
5100 Silver Star Road
Vernon, B.C. CANADA V1B 3K4
250-545-2693 Fax. 250-549-4349
Web Site: www.kanmor.com

